


 
 

 
 

 
 



 

 
 
 

 
 
 


 






 








 

 
 
 










 




Original	Replacement	Original	Replacement
	Power		Power
	i		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Favorite		Shift + Pre Ch
	Last View		Pre Ch
	Audio		Dual
	Off Timer		Shift + Power
	Aspect		Format
	Guide		Guide
	Vol +		Vol +
	Vol -		Vol -
	Input TV		TV/R
	Input AV		AV
	CH +		Ch +
	CH -		Ch -
	Mute		Mute
	Text		Text
	STTL		Subt
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu





Original	Replacement	Original	Replacement
 Back / Return	 Back		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 <<<	 <<<		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 >>>	 >>>		
 Stop	 Stop		

