 

 

 

 



 





 
 

 


 




 
 



 

 



 

 

 




 


 
 
 





 





 



 




 
 





 


 

 



 




 

 

 



 

 



Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Power Tv	 Shift + Power	 9	 9
 Vol+ Tv	 Vol+	 Cast Vieta	 Shift + Display / Media
 CH+ Tv	 Shift + CH+ /	 Del	 Shift + Exit / Cancel / Clear
 Select Drive	 Smart / List	 Del	 Fav / Marker / PC
 AV Tv	 Shift + AV / Input / RDS	 0	 0
 Vol- Tv	 Vol-	 Input Select	 AV / Input / RDS
 CH- Tv	 Shift + CH- /	 Prog/Check	 TV/Radio /
 1	 1	 I<< Skip	 I<< / Preset-
 2	 2	 Skip >>I	 >>I / Preset+
 3	 3	 << Slow/Search	 << / Tune-
 CH/Page+	 CH+ / Page+	 Slow/Search >>	 >> / Tune+
 4	 4	 Stop	 Stop / Hold
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 Play/x1.3	 Play / Slow
 CH/Page-	 CH- / Page-	 i/Status	 Info / Angle
 7	 7	 Guide	 Guide / EPG / -/-





Original	Replacement
 Exit	 Exit / Cancel / Clear
 Direct Navigator	 Shift + Smart / List
 Direct Navigator	 D.Menu / Top
 <II/Left	 Left
 OK	 OK
 Up	 Up
 Right/II>	 Right
 Function Menu	 Menu / Home
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green/Time Slip	 Green / APP / Repeat
 Yellow/Create Chapter	 Yellow / YouTube / Repeat
 Blue/Manual Skip	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode

Original	Replacement
 Ext Link	 Eject / Surround
 Direct Tv Rec	 Picture / Format
 [=]/Text	 Text / Goto
 [=◇]/STTL	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Display	 Display / Media

