





 
 


 




 

 
 



 
 





 
 



 



 


 
 


 
 
 


 
 

 

 



 



 


 





Original	Replacement	Original	Replacement
 Power	 Power	 BD/SD	 Smart
 Sleep	 Sleep	 iPod	 Media
 1	 1	 Ext-In/Radio	 TV/R
 2	 2	 << Slow Search	 <<
 3	 3	 Play	 Play
 4	 4	 Slow Search >>	 >>
 5	 5	 I<< Skip/Down	 I<<
 6	 6	 Pause	 Pause
 7	 7	 Skip >>I/Up	 >>I
 8	 8	 Stop	 Stop
 9	 9	 Status	 Text
 0	 0	 Exit	 Exit
 Cancel	 Pre Ch	 Option	 Options
 PIP	 3D	 Return	 Back
 Vol+	 Vol +	 Top Menu/Direct Navigator	 List
 Vol-	 Vol -	 Start	 Format
 Mute	 Mute	 Pop-Up Menu	 Menu





	Original	Replacement	Original	Replacement
	Up			
	Down			
	Right/II>			
	Left/<II			
	OK			
	Red			
	Green			
	Yellow			
	Blue			
	-CH Select/Sound			
	Surround			
	Display			
	Audio			
	Power Tv			
	AV Tv			
	Vol+ Tv			
	Vol- Tv			

