



| | Original | Replacement | | Original | Replacement |
|---|--------------|--|--|----------|--|
|  | POWER |  Power |  | INFO |  Help / Info |
|  | AUTO SETUP |  Auto |  | LAMP |  +  Shift + Auto |
|  | COMPUTER 1 |  Comp / Video |  | FREEZE |  Freeze / Timer |
|  | COMPUTER 2 |  +  Shift + Mode |  | AV MUTE |  Blank / Mute |
|  | HDMI |  Mode |  | P-TIMER |  +  Shift + Freeze / Timer |
|  | VIDEO |  +  Shift + Comp / Video |  | D.ZOOM + |  + / Play |
|  | S-VIDEO |  Volt / Focus |  | D.ZOOM - |  - / Stop |
|  | COMPONENT |  3D / Invert |  | VOL + |  Vol + / Page + |
|  | DIGITAL LINK |  +  Shift + Menu |  | VOL - |  Vol - / Page - |
|  | ▲ |  Up |  | IMAGE |  Eco / Aspect |
|  | ▼ |  Down |  | MUTE |  +  Shift + Blank / Mute |
|  | > |  Right | | | |
|  | < |  Left | | | |
|  | ENTER |  Enter | | | |
|  | MENU |  Menu | | | |
|  | SCREEN |  Source | | | |
|  | KEystone |  +  Shift + Up | | | |

