















 

 








 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 [ ]/Picture	 Picture / Format
 [J]/Sound	 Audio / Lang I/II
 Set Up	 Setup / OPT /
 Right	 Right
 Up	 Up
 Left	 Left
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 [ +]	 Smart / List
 Tv/AV	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement
 [≡♦]/F.P.	 Menu / Home
 [≡i]/Index	 Info / Angle
 [≡+]/Hold/Still	 Shift + Picture / Format
 [≡]/Tv/Text	 Text / Goto
 OO	 D.Menu / Top
 [+]/Aspect	 Zoom / Size
 [ ]/Multiwindow	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/VCR	 0





Original	Replacement
C	SHIFT + CLEAR / EXIT / CANCEL Shift + Exit / Cancel / Clear
-/--	GUIDE / EPG Guide / EPG / -/--
Play VCR	SLOW Play / Slow
Stop VCR	HOLD Stop / Hold
<< VCR button"/> << VCR	TUNE- << / Tune-
>> VCR button"/> >> VCR	TUNE+ >> / Tune+
Rec VCR	REC MODE Rec / Rec Mode
Power VCR	SHIFT + Power Shift + Power
Power DVD	SHIFT + LIST / SMART Shift + Smart / List
Direct Tv Rec	PROGRAM TV / RADIO TV/Radio /
N VCR/DVD	SHIFT + 2 Shift + 2
Pause/Step VCR	STEP - FREEZE Pause / Step / Freeze
Play DVD	OK OK
Stop DVD	SHIFT + Down Shift + Down
Programme- VCR	CH PAGE CH- / Page-
<< DVD button"/> << DVD	SHIFT + Left Shift + Left
Programme+ VCR	CH PAGE CH+ / Page+

Original	Replacement
>> DVD	SHIFT + Right Shift + Right
STR VCR/DVD	CLEAR / EXIT / CANCEL Exit / Cancel / Clear
?/Help VCR/DVD	TITLE / SOUND Sound / Title

