



Original	Replacement
Power VCR	Power
Power Tv	Shift + Power
Replay	Blue / Prime Video / Random
OSD/Display	Display / Media
Exit	Exit / Cancel / Clear
AV Link	AV / Input / RDS
Audio	Audio / Lang I/II
Search	Red / Netflix / Search
Rec	Rec / Rec Mode
Index >>I	>>I / Preset+
I<< Index	I<< / Preset-
Tracking-V-Lock	CH+ / Page+
Tracking-V-Lock Down	CH- / Page-
AV Tv	Shift + AV / Input / RDS
Volume+ Tv	Vol+
Volume- Tv	Vol-
CH+ Tv	Shift + CH+ / Page+

Original	Replacement
CH- Tv	Shift + CH- /
Menu	Menu / Home
Input	Smart / List
Reset	Back / Return
Pause/Step	Pause / Step / Freeze
OK	OK
Stop	Stop / Hold
Down	Down
Play	Play / Slow
Up	Up
Right	Right
>>	>> / Tune+
<<	<< / Tune-
Left	Left
Prog/Check	TV/Radio /
Cancel	Shift + Exit / Cancel / Clear
SP/LP/EP	Picture / Format





Original	Replacement	Original	Replacement
Timer	Sleep / Timer		
Prog/Check Up	Shift + Up		
Prog/Check	Shift + Down		
Date+	1		
Date-	4		
On+	2		
On-	5		
Off+	3		
Off-	6		

Original	Replacement	Original	Replacement

