






































 
 



 

 

 

 

Original	Replacement
 Power	 Power
 Picture	 Picture / Format
 Input TV	 AV / Input / RDS
 Input AV	 Shift + AV / Input / RDS
 Netflix	 Shift + Red / Netflix /
 Rakuten TV	 Shift + Guide / EPG / -/--
 Prime Video	 Shift + Blue / Prime
 YouTube	 Shift + Yellow / YouTube /
 My App	 TV/Radio /
 Apps	 Shift + Green / APP /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Home	 Shift + Menu /
 Home	 Display / Media

Original	Replacement
 Guide	 Guide / EPG / -/--
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Option	 Setup / OPT /
 Down	 Down
 Back	 Back / Return
 Provider / List	 Smart / List
 Mic	 Sound / Title
 Scenery	 D.Menu / Top
 I<< / <<	 << / Tune-
 Play	 Play / Slow
 >> / >>I	 >> / Tune+
 Stop	 Stop / Hold





Original	Replacement
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 Help	 Eject / Surround
 0	 0
 Last View	 Fav / Marker / PC

