


Original	Replacement
 POWER	 Power
 SLEEP Auto OFF	 Sleep / Timer
 CLOCK / TIMER	 Shift + Sleep / Timer
 PLAY / REC	 Rec / Rec Mode
 DISC	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 PROGRAM	 TV/Radio /
 4	 4
 5	 5
 6	 6
 PLAY MODE	 Blue / Prime Video / Random
 7	 7
 8	 8
 9	 9
 REPEAT	 Green / APP / Repeat

Original	Replacement
 DEL	 Red / Netflix / Search
 0	 0
 >10/Space	 Guide / EPG / -/--
 PLAY/PAUSE CD	 Play / Slow
 TUNER/BAND	 Left
 STOP/CLEAR	 Stop / Hold
 PLAY TAPE	 Shift + Play /
 MUSIC PORT	 Down
 VOL-	 Vol-
 VOL+	 Vol+
 ALBUM -	 CH- / Page-
 ALBUM+	 CH+ / Page+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 ENTER	 OK
 TITLE SEARCH	 Sound / Title
 MANUAL EQ	 Audio / Lang I/II





	Original	Replacement	Original	Replacement
	 DISPLAY	 Display / Media		
	 DIMMER	 +  Shift + Mute / Dimmer		
	 H BASS	 Menu / Home		
	 PRESET EQ	 Subtitle / EQ		
	 MUTING	 Mute / Dimmer		

