

 

 












 


















 











 

 

 










 








Original		Replacement		Original		Replacement	
	Power		Power		[i]/Info		Info / Angle
	DVD (Universal Mode)		Shift + 2		<<		<< / Tune-
	STB (Universal Mode)		Shift + 3		Play/Pause		Play / Slow
	HTS (Universal Mode)		Shift + 4		>>		>> / Tune+
	Red/Demo		Red / Netflix / Search		Stop		Stop / Hold
	Green		Green / APP / Repeat		Rec		Rec / Rec Mode
	Yellow/[ I ]		Yellow / YouTube / Repeat		Vol+		Vol+
	Blue		Blue / Prime Video / Random		Mute		Mute / Dimmer
	Home		Menu / Home		PR+		CH+ / Page+
	Guide		Guide / EPG / -/--		Vol-		Vol-
	Options		Setup / OPT /		[<>]/Format		Picture / Format
	Up		Up		PR-		CH- / Page-
	Left		Left		Net TV		Smart / List
	OK		OK		Teletext		Text / Goto
	Right		Right		Disc Menu		D.Menu / Top
	Back		Back / Return		1		1
	Down		Down		2		2





Original		Replacement		Original		Replacement	
<b>3</b> DEF	3	<b>3</b> CD - STB	3				
<b>4</b> GHI	4	<b>4</b> VIDEO	4				
<b>5</b> JKL	5	<b>5</b> TAPE	5				
<b>6</b> MNO	6	<b>6</b> TUNER	6				
<b>7</b> PQRS	7	<b>7</b> AUX - HDD	7				
<b>8</b> TUV	8	<b>8</b> USB	8				
<b>9</b> WXYZ	9	<b>9</b> BLUETOOTH	9				
<b>SUBTITLE</b>	Subtitle	<b>SUBTITLE</b> EQ	Subtitle / EQ				
<b>0</b> . @	0	<b>0</b> HDMI - BAT	0				
<b>Source</b>	Source	<b>RDS AV INPUT</b>	AV / Input / RDS				
<b>AMBILIGHT</b>	Ambilight	<b>MEDIA DISPLAY</b>	Display / Media				

