




 



 
 


 



















 

 
 
 

 
 



 
 






 









 


 

 




Original		Replacement		Original		Replacement	
	Power		Power		Pause		Pause
	Eject		Eject		>		>>
	USB		Media		Stop		Stop
	Radio		TV/R		Vol+		Vol +
	Aux/Di/MP3 Link		AV		Vol-		Vol -
	HDMI		Pre Ch		Mute		Mute
	Disc		Menu		Treble		Ch +
	Info		Info		Bass		Ch -
	Back/Title		Back		Ambisound		Smart
	Options		Options		1		1
	Up		Up		2		2
	Down		Down		3		3
	Right/>>>		Right		4		4
	Left/;<<		Left		5		5
	OK		Ok		6		6
	I<		I<<		7		7
	Play		Play		8		8





Original		Replacement		Original		Replacement	
	9		9				
	0		0				
	Subtitle		Subt				
	Audio Sync		Format				
	Zoom		Shift + Eject				
	Angle		Sleep				
	Repeat/Program		Text				
	Sound		Dual				

