 
 


 
 

 
 

 
 

 

 




 

 

 





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	Smart Tv		Smart / List
	Home		Menu / Home
	Bluetooth		Shift + 9
	Disc Menu		D.Menu / Top
	Up		Up
	Top Menu		Shift + D.Menu / Top Menu
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	≡		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Original	Replacement	Original	Replacement
	Blue		Blue / Prime Video / Random
	Eject		Eject / Surround
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>I		>>I / Preset+
	Vol+		Vol+
	Mute		Mute / Dimmer
	III		Shift + 3
	Vol-		Vol-
	1		1
	2		2
	3		3
	4		4



