

 





 

 







 

 

 

 























Original	Replacement
	 Power
	 D.Menu / Top
	 AV / Input / RDS
	 Setup / OPT /
	 Picture / Format
	 TV/Radio /
	 Exit / Cancel / Clear
	 Guide / EPG / -/-
	 Display / Media
	 Smart / List
	 Up
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Info / Angle

Original	Replacement
	 Menu / Home
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Shift + Red / Netflix /
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6





Original	Replacement
	
	
	
	
	
	
	
	
	
	
	
	

Original	Replacement

