



| Original   | Replacement  | Original  | Replacement  |
|--|--|---|--|
|  Standby      |  Power    |  Green/Smart |  Green    |
|  1            |  1        |  Yellow/Lock |  Yellow   |
|  2            |  2        |  Blue/Sleep  |  Blue     |
|  3            |  3        |  Menu        |  Menu     |
|  4            |  4        |  Teletext    |  Text     |
|  5            |  5        |  P+          |  Ch +     |
|  6            |  6        |  P-          |  Ch -     |
|  7            |  7        |  Up          |  Up       |
|  8            |  8        |  Down        |  Down     |
|  9            |  9        |  Right       |  Right    |
|  0          |  0      |  Left      |  Left   |
|  P<P        |  Pre Ch |  OK        |  Ok     |
|  Clear      |  Exit   |  Vol+      |  Vol +  |
|  Mute       |  Mute   |  Vol-      |  Vol -  |
|  Record     |  Rec    |  >I/Index  |  Format |
|  Timer      |  AV     |  >I</Still |  3D     |
|  Red/Select |  Red    |  <<        |  <<     |



