



 



 



 











 












Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 HDD	 Shift + 7
 0	 0
 Timer	 Sleep / Timer
 DVD	 Shift + 2
 Up	 Up
 Setup	 Setup / OPT /
 Left	 Left

Original	Replacement
 OK	 OK
 Right	 Right
 Select	 Shift + OK
 Down	 Down
 [i+]	 Info / Angle
 Stop	 Stop / Hold
 Play	 Play / Slow
 Rec	 Rec / Rec Mode
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Return	 Shift + Back / Return
 >>I	 >>I / Preset+
 Back Jump	 Back / Return
 Clear	 Exit / Cancel / Clear
 Edit	 Shift + Setup / OPT / Tools
 FWD Jump	 >> / Tune+
 DV	 AV / Input / RDS





Original	Replacement	Original	Replacement
T/C	Text / Goto		
Play Mode	Shift + Play /		
CH+	CH+ / Page+		
Tuner	Shift + 6		
TV/HDD	TV/Radio /		
Rec Mode	Shift + Rec / Rec Mode		
CH-	CH- / Page-		

Original	Replacement

