

 


 
 




 






 
 




 



 

 

 



 



 


 
 



 

 

 
 




 
 

 


 















 
 

 
 


 

 




 



Original	Replacement	Original	Replacement
 Power	 Power	 Vol +	 Vol +
 TV	 Red	 Vol -	 Vol -
 DISC	 Green	 Up	 Up
 TUNER	 Yellow	 Left	 Left
 AUX	 Blue	 OK	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 I<<	 I<<
 4	 4	 >>I	 >>I
 5	 5	 Stop	 Stop
 6	 6	 Play	 Play
 7	 7	 Pause	 Pause
 8	 8	 I<<	 <<
 9	 9	 >>I	 >>
 0	 0	 Subtitle	 Subt
 Disc Menu	 D. Menu	 Angle	 Smart
 OSD Menu	 Menu	 Zoom	 Eject

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 >>>	 >>>	 I<<	 I<<
 I<<	 I<<	 >>>	 >>>
 LIST	 LIST	 SOUND	 SOUND
 DUAL	 DUAL	 AD	 AD
 SUBT	 SUBT	 SETTINGS	 SETTINGS
 OPT	 OPT	 PROG	 PROG
 ECO	 ECO	 SEARCH	 SEARCH
 3D	 3D	 PICTURE	 PICTURE
 SLEEP	 SLEEP	 FORMAT	 FORMAT
 TV/R	 TV/R	 ECO	 ECO
 FORMAT	 FORMAT	 3D	 3D
 3D	 3D	 TIMER	 TIMER
 E-MANUAL	 E-MANUAL	 ZOOM	 ZOOM
 D.MENU	 D.MENU	 AV	 AV
 TEXT	 TEXT	 TOP MENU	 TOP MENU
 AV	 AV	 DISPLAY INFO	 DISPLAY INFO
 MENU	 MENU	 OK	 OK
 INFO	 INFO	 Left	 Left
 CLEAR	 CLEAR	 Right	 Right
 EXIT	 EXIT	 Down	 Down
 RETURN	 RETURN	 I<<	 I<<
 BACK	 BACK	 >>I	 >>I
 HOME	 HOME	 Stop	 Stop
 SMART	 SMART	 Play	 Play
 APP	 APP	 Pause	 Pause
 MEDIA	 MEDIA	 I<<	 I<<
 VOL +	 VOL +	 >>I	 >>I
 CH -	 CH -	 <<	 <<
 1	 1	 >>	 >>
 2	 2	 Subt	 Subt
 3	 3	 Smart	 Smart
 4	 4	 Media	 Media
 5	 5	 VOL +	 VOL +
 6	 6	 CH -	 CH -
 7	 7	 1	 1
 8	 8	 2	 2
 9	 9	 3	 3
 0	 0	 4	 4
 A	 A	 5	 5
 B	 B	 6	 6
 C	 C	 7	 7
 D	 D	 8	 8
 Mandis SHOP	 Mandis SHOP	 9	 9
 www.mandis.tv	 www.mandis.tv	 0	 0
		 FAV	 FAV
		 PRE-CH	 PRE-CH




 

 















 
 
 



 



 






Original	Replacement	Original	Replacement
 Set Up	 Options		
 Repeat	 Text		
 Repeat A-B	 Shift + Play		
 Scan	 Media		
 Return / Title	 Back		
 Audio	 Dual		
 Prog	 Shift + Sleep		
 Sleep	 Sleep		
 Mute	 Mute		
 Sound	 Shift + Dual		
 SURR	 Format		
 TV Vol+	 Ch +		
 TV Vol-	 Ch -		





Original	Replacement
 Power	 Power
 DISC	 Green
 TV	 Red
 TUNER	 Yellow
 AUX	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol +	 Vol +
 Vol -	 Vol -

Original	Replacement
 TV Vol +	 Ch +
 TV Vol -	 Ch -
 >>I	 >>I
 >>I	 >>I
 <<I	 <<I
 <<I	 <<I
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Stop	 Stop





Original	Replacement
 TV	 Red
 DISC	 Green
 TUNER	 Yellow
 AUX	 Blue
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >>I	 >>I
 >>I	 >>

Original	Replacement
 I<<	 I<<
 I<<	 <<
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Prog	 Sleep
 Stop	 Stop





Original	Replacement
 TV	 Red
 DISC	 Green
 TUNER	 Yellow
 AUX	 Blue
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >>I	 >>I
 >>I	 >>

Original	Replacement
 I<<	 I<<
 I<<	 <<
 Up	 Up
 Down	 Down
 OK	 Ok
 Right	 Right
 Prog	 Sleep
 Stop	 Stop

