














































 











Original	Replacement
 Power	 Power
 DVD	 Shift + 2
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Return	 Back / Return
 0	 0
 Display	 Display / Media
 Disc Menu	 D.Menu / Top
 Up	 Up

Original	Replacement
 System Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Repeat A-B  Yellow / YouTube / Repeat		
	Program  TV/Radio /		
	Clear  Exit / Cancel / Clear		
	Title  Sound / Title		
	Shuffle  Blue / Prime Video / Random		





Original	Replacement
Power	Power
TV / VCR	TV/Radio /
VCR	Shift + 4
Eject	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Display	Display / Media
Up	Up
System Menu	Menu / Home

 

Original	Replacement
Left	Left
OK	OK
Right	Right
I<<	I<< / Preset-
Down	Down
>>I	>>I / Preset+
Stop	Stop / Hold
Play	Play / Slow
Pause / Step	Pause / Step / Freeze
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
Input	AV / Input / RDS
Rec / ITR	Rec / Rec Mode
Program	Shift + TV/Radio / Program
Clear	Exit / Cancel / Clear
LP	Setup / OPT /
C.Lock	Back / Return





Original

Replacement

	Show View / Video Plus		Smart / List

Original

Replacement

