



Original	Replacement
 Power	 Power
 [i+]/Search	 Info
 [i+]/Search	 TV/R
 [X]/Mark	 Pre Ch
 [..≡]/Zoom	 Options
 [..≡]/Zoom	 Shift + Eject
 [≡] / DVD Menu	 D. Menu
 [≡] / DVD Menu	 Text
 [?]/Subtitle	 Exit
 [] / A-B	 List
 [↓] / Repeat	 Shift + Text
 [◀▶] / Clear	 Format
 <<Fast	 <<
 >>Fast	 >>
 <<Skip	 I<<
 >>Skip	 >>I
 Stop/Eject	 Stop

Original	Replacement
 Stop/Eject	 Eject
 Pause/Play	 Play
 Pause/Play	 Pause
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Red/Audio I-II	 Red
 Red/Audio I-II	 Dual
 Green / J	 Green





Original	Replacement	Original	Replacement
 Green / ♪	 Shift + Dual		
 Yellow / □	 Yellow		
 Yellow / □	 Shift + Format		
 Blue / TV/DVD	 Blue		
 Blue / TV/DVD	 Media		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 □→	 AV		
 P<P	 Back		

Original	Replacement

