





 








 






Original	Replacement
 Power	 Power
 ambilight	 Display / Media
 Menu	 Menu / Home
 Smart	 Smart / List
 Sources/Pair	 AV / Input / RDS
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 ←	 Back / Return
 Home	 Shift + Menu /
 Tv Guide/List	 Guide / EPG / -/--
 <<<	 <<< / Tune-
 ▶	 Play / Slow
 >>>	 >>> / Tune+
 ■	 Stop / Hold

Original	Replacement
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Netflix	 Shift + Red / Netflix / Search
 prime video	 Shift + Blue / Prime
 Rakuten Tv	 Shift + Green / APP / APP
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Exit/Tv	 Exit / Cancel / Clear
 1	 1
 2	 2





Original	Replacement	Original	Replacement
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text / Goto
	Options/+		Setup / OPT /

