 

 

 

 

 



 





 



 













 



 



 

 

 

 

 

 

 

 





Original	Replacement
	 Power
	 1
	 2
	 3
	 Green / APP / Repeat
	 Blue / Prime Video / Random
	 TV/Radio /
	 Sleep / Timer
	 Shift + Sleep / Timer
	 Display / Media
	 Guide / EPG / -/--
	 Pause / Step / Freeze
	 Mute / Dimmer
	 Vol-
	 Vol+
	 Play / Slow
	 Stop / Hold

Original	Replacement
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 AV / Input / RDS
	 Picture / Format
	 Zoom / Size
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right





 



 



















 











 

 

 

 

 

 

 

 

Original	Replacement		
	Power		Power
	Sleep		Sleep / Timer
	Timer		Shift + Sleep / Timer
	Side		Guide / EPG / -/-
	Pause		Pause / Step / Freeze
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	Play		Play / Slow
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Inc.Surr.		AV / Input / RDS
	Flat		Picture / Format
	Loudness		Zoom / Size

Original	Replacement		
	Bass-		Down
	Bass+		Up
	Treble-		CH- / Page-
	Treble+		CH+ / Page+
	Balance L		Left
	Balance R		Right





Original	Replacement
	 Green / APP / Repeat
	 Power
	 Blue / Prime Video / Random
	 TV/Radio /
	 Sleep / Timer
	 Shift + Sleep / Timer
	 Display / Media
	 Pause / Step / Freeze
	 Mute / Dimmer
	 Vol-
	 Vol+
	 Play / Slow
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+

Original	Replacement
	 AV / Input / RDS
	 Picture / Format
	 Zoom / Size
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right





Original	Replacement		
	Power		Power
	Power AUX	+	Shift + Power
	AUX		7
	Program		TV/Radio /
	Sleep		Sleep / Timer
	Timer	+	Shift + Sleep / Timer
	Display		Display / Media
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Inc.Surr.		AV / Input / RDS
	Flat		Picture / Format
	Loudness		Sound / Title

Original	Replacement		
	Bass-		Down
	Bass+		Up
	Treble-		CH- / Page-
	Treble+		CH+ / Page+
	Balance L		Left
	Balance R		Right

