 






 












 











 





Original	Replacement
 Power	 Power
 Ambilight	 Smart / List
 prime video	 Shift + Blue / Prime
 YouTube	 Shift + Yellow / YouTube /
 Netflix	 Shift + Red / Netflix /
 :::	 D.Menu / Top
 Sources	 AV / Input / RDS
 Exit/TV	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 ←	 Back / Return
 Colors	 Display / Media
 Home	 Shift + Menu / Home

Home

Original	Replacement
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 +/Options/Info	 Info / Angle
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Tv Guide/List	 Guide / EPG / -/-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 1	 1





Original		Replacement	
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
TEXT	Text	GOTO TEXT	Text / Goto
0	0	HDMI - BAT 0	0
⚙️	*	OPT-TOOLS SETUP	Setup / OPT /

Original		Replacement	

