









 



 




















 











 
 




 


 



 


 














Original		Replacement		Original		Replacement	
	Standby		Power		Stop		Stop / Hold
	1		1		Play/Pause		Play / Slow
	2		2		Play/Pause		Pause / Step / Freeze
	3		3		I>/Resume		Shift + Play /
	4		4		Surround		Eject / Surround
	5		5		Sound		Sound / Title
	6		6		Night		Shift + Sleep / Timer
	7		7		Mute		Mute / Dimmer
	8		8		Repeat		Green / APP / Repeat
	9		9		Repeat A-B		Yellow / YouTube / Repeat
	0		0		Sleep		Sleep / Timer
	Vol+		Vol+		DIM		Shift + Mute / Dimmer
	Vol-		Vol-		Subw +		Up
	Left		Left		Rear +		Shift + CH+ /
	Right		Right		Center +		CH+ / Page+
	I<<		I<< / Preset-		Tv Vol+		Shift + Vol+
	>>I		>>I / Preset+		Subw -		Down





Original	Replacement
 Rear -	 Shift + CH- /
 Center -	 CH- / Page-
 Tv Vol-	 Shift + Vol-

Original	Replacement







 



 

 

 









 

 



 





Original		Replacement	
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disc (DVD)		D.Menu / Top
	0		0
	Vol+		Vol+
	System (DVD)		Menu / Home
	Vol-		Vol-
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Original		Replacement	
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	I>/Resume		Shift + Play /





Original	Replacement	Original	Replacement
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

