



| Original  | Replacement  |
|---|--------------|
|    | Power        |
|    | Display      |
|    | Open / Close |
|    | Mute         |
|    | VCR          |
|    | TV           |
|    | CDR          |
|    | Tuner        |
|    | DVD          |
|    | 1            |
|    | 2            |
|    | 3            |
|  | 4            |
|  | 5            |
|  | 6            |
|  | 7            |
|  | 8            |

| Original  | Replacement |
|---|-------------|
|    | 9           |
|    | 0           |
|    | Sleep       |
|    | System Menu |
|    | Disc Menu   |
|    | Exit        |
|    | I<<         |
|    | >>I         |
|    | Tone        |
|    | Mode        |
|    | Up / >>     |
|    | Up / >>>    |
|  | Down / <<<  |
|  | Down / <<<  |
|  | Right       |
|  | Left        |
|  | Play        |



[illegible]