



| Original | Replacement |
|----------------|------------------|
| Power Receiver | Power |
| BD | 1 |
| DVD | 2 |
| DVR / BDR | 5 |
| HDMI | 0 |
| TV | TV/Radio / |
| CD | 3 |
| NET | 7 |
| ADAPTER | Eject / Surround |
| iPod USB | 8 |
| Tuner | 6 |
| Video | 4 |
| CD-R | 9 |
| Input Select | Shift + Left |
| Input Select ~ | Shift + Right |
| Master Volume | Vol+ |
| Master Volume | Vol- |

| Original | Replacement |
|-----------|-----------------------|
| Mute | Mute / Dimmer |
| Top Menu | D.Menu / Top |
| Band | Subtitle / EQ |
| Audio | Audio / Lang I/II |
| Tune+ | Shift + >> / |
| Up | Up |
| Tools | Setup / OPT / |
| T.Edit | Text / Goto |
| Video | Picture / Format |
| Left | Left |
| Preset - | Shift + I<< / Preset- |
| Enter | OK |
| Preset + | Shift + >>I / Preset+ |
| Right | Right |
| iPod CTRL | Smart / List |
| Home Menu | Menu / Home |
| Tune- | Shift + << / |





 




















 

 



 

 







 





 

 

 

 







| Original | | Replacement | | Original | | Replacement | |
|----------|---------------------|-------------|-----------------------------|----------|------------|-------------|-----------------------------|
| | Down | | Down | | Stop | | Stop / Hold |
| | Return | | Back / Return | | >>I | | >>I / Preset+ |
| | Auto / Alc / Direct | | Info / Angle | | 1 Tuner | | Shift + 1 |
| | Stereo | | Sound / Title | | 2 Tuner | | Shift + 2 |
| | Repeat | | Green / APP / Repeat | | 3 Tuner | | Shift + 3 |
| | Standard | | Shift + Smart / List | | Audio DVD | | Shift + Audio / Lang I/II |
| | Random | | Blue / Prime Video / Random | | 4 Tuner | | Shift + 4 |
| | Adv. Surr. | | Guide / EPG / -/- | | Signal Sel | | Shift + Setup / OPT / Tools |
| | << | | << / Tune- | | MCACC | | Fav / Marker / PC |
| | Phase CTRL | | Red / Netflix / Search | | 5 Tuner | | Shift + 5 |
| | Play | | Play / Slow | | 6 Tuner | | Shift + 6 |
| | >> | | >> / Tune+ | | Sleep | | Sleep / Timer |
| | Status | | Exit / Cancel / Clear | | Disp | | Display / Media |
| | I<< | | I<< / Preset- | | 7 Tuner | | Shift + 7 |
| | Pause | | Pause / Step / Freeze | | CH Level | | Shift + CH+ / |
| | MPX | | Zoom / Size | | 8 Tuner | | Shift + 8 |
| | PQLS | | Shift + Menu / Home | | A.ATT. | | Yellow / YouTube / Repeat |





 

















 











 

 



 

 


 
 



 

 















| Original | | Replacement | | Original | | Replacement | |
|---|--------------|---|-----------------------|---|-------|---|-------------------|
|  | Power Source |  | Power |  | 1 |  | 1 |
|  | DVD |  | Shift + 2 |  | 2 |  | 2 |
|  | Top Menu |  | D.Menu / Top |  | 3 |  | 3 |
|  | Up |  | Up |  | Audio |  | Audio / Lang I/II |
|  | Left |  | Left |  | 4 |  | 4 |
|  | Enter |  | Shift + OK |  | 5 |  | 5 |
|  | Enter |  | OK |  | 6 |  | 6 |
|  | Right |  | Right |  | 7 |  | 7 |
|  | Down |  | Down |  | 8 |  | 8 |
|  | Return |  | Back / Return |  | 9 |  | 9 |
|  | << |  | << / Tune- |  | 0 |  | 0 |
|  | Play |  | Play / Slow |  | Menu |  | Menu / Home |
|  | >> |  | >> / Tune+ | | | | |
|  | I<< |  | I<< / Preset- | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |
|  | Stop |  | Stop / Hold | | | | |
|  | >>I |  | >>I / Preset+ | | | | |





| Original | | Replacement | | Original | | Replacement | |
|---|---------------|---|---------------|---|----------|---|-------------------------|
|  | Power Source |  | Power |  | 1 |  | 1 |
|  | Tuner |  | Shift + 6 |  | 2 |  | 2 |
|  | Master Volume |  | Vol+ |  | 3 |  | 3 |
|  | Master Volume |  | Vol- |  | 4 |  | 4 |
|  | Mute |  | Mute / Dimmer |  | 5 |  | 5 |
|  | Band |  | Subtitle / EQ |  | 6 |  | 6 |
|  | Tune+ |  | >> / Tune+ |  | Disp |  | Display / Media |
|  | Tune+ |  | Up |  | 7 |  | 7 |
|  | T.Edit |  | Text / Goto |  | 8 |  | 8 |
|  | Preset+ |  | >> / Preset+ |  | 9 |  | 9 |
|  | Preset- |  | Left |  | D.Access |  | D.Menu / Top |
|  | Enter |  | OK |  | 0 |  | 0 |
|  | Preset- |  | << / Preset- |  | Class |  | Shift + Display / Media |
|  | Preset+ |  | Right |  | Menu |  | Menu / Home |
|  | Tune- |  | << / Tune- |  | Search |  | Red / Netflix / Search |
|  | Tune- |  | Down | | | | |
|  | MPX |  | Zoom / Size | | | | |

