



Original		Replacement		Original		Replacement	
	Power Receiver		Power		Loudness		Subtitle / EQ
	Input Sel		AV / Input / RDS		Test Tone		Text / Goto
	Standard		Sound / Title		Left/ST-		Left
	Stereo		Audio / Lang I/II		Right/ST+		Right
	ADV Surr.		Eject / Surround		CH Select		Smart / List
	Master		Vol+		Midnight		Sleep / Timer
	Master Volume-		Vol-		ATT		D.Menu / Top
	Enter		OK		Signal Select		Menu / Home
	Remote Setup		Setup / OPT /		CH Level+		CH+ / Page+
	Effect-		I<< / Preset-		CH Level-		CH- / Page-
	Effect+		>>I / Preset+		TV		1
	Mute		Mute / Dimmer		CD-R		3
	DVD		2		Power TV		Shift + Power
	VCR		4		1 Tv		Shift + 1
	TUN		6		2 Tv		Shift + 2
	Up/Tune+		Up		3 Tv		Shift + 3
	Down/Tune-		Down		4 Tv		Shift + 4





Original	Replacement
5 Tv	Shift + 5
6 Tv	Shift + 6
7 Tv	Shift + 7
9 Tv	Shift + 9
8 Tv	Shift + 8
0 Tv	Shift + 0
+10 Tv	Shift + Guide / EPG / -/-
Menu Tv	Shift + Menu /
Tv Input	Shift + AV / Input / RDS
Tv Vol+	Shift + Vol+
Tv Vol-	Shift + Vol-
Channel + Tv	Shift + CH+ /
Channel - Tv	Shift + CH- /
Up Tv	Shift + Up
Down Tv	Shift + Down
Enter Tv	Shift + OK
Right Tv	Shift + Right

Original	Replacement
Left Tv	Shift + Left
Pause/T.Edit Tv	Shift + Pause / Step /
Play/D.Access Tv	Shift + Play /
Stop/MPX Tv	Shift + Stop /
>>/RF ATT Tv	Shift + >>I / Preset+
I<</Display Tv	Shift + I<< / Preset-
>>/Class Tv	Shift + >> /
<</Band Tv	Shift + << /
Rec Tv	Shift + Rec / Rec Mode
Disc Tv	Shift + Fav / Marker / PC





Original	Replacement
Power DVD	Power
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Top Menu	D.Menu / Top
1 DVD	1
2 DVD	2
3 DVD	3
4 DVD	4
5 DVD	5
6 DVD	6
7 DVD	7
8 DVD	8
9 DVD	9
0 DVD	0
+10 DVD	Guide / EPG / -/--
Disc DVD	Fav / Marker / PC

Original	Replacement
Menu DVD	Menu / Home
Master	Vol+
Master volume-	Vol-
Mute	Mute / Dimmer
Channel+ DVD	CH+ / Page+
Channel- DVD	CH- / Page-
Up DVD	Up
Down DVD	Down
Right DVD	Right
Left DVD	Left
Enter DVD	OK
Pause DVD	Pause / Step / Freeze
Rec DVD	Rec / Rec Mode
Play DVD	Play / Slow
<< DVD	<< / Tune-
>> DVD	>> / Tune+
Stop DVD	Stop / Hold

 



 



 


 


 



 

 

 

 

 



 

 






 
 



 

 
 



 

 













Original	Replacement	Original	Replacement
>>I DVD	>>I / Preset+	Down VCR	Shift + Down
I<< DVD	I<< / Preset-	Right VCR	Shift + Right
Power VCR	Shift + Power	Left VCR	Shift + Left
1 VCR	Shift + 1	Enter VCR	Shift + OK
2 VCR	Shift + 2	Pause VCR	Shift + Pause / Step /
3 VCR	Shift + 3	Play VCR	Shift + Play /
4 VCR	Shift + 4	Stop VCR	Shift + Stop /
5 VCR	Shift + 5	<< VCR	Shift + << /
6 VCR	Shift + 6	>>I VCR	Shift + >>I / Preset+
7 VCR	Shift + 7	>> VCR	Shift + >> /
8 VCR	Shift + 8	I<< VCR	Shift + I<< / Preset-
9 VCR	Shift + 9	Rec VCR	Shift + Rec / Rec Mode
0 VCR	Shift + 0		
Disc VCR	Shift + Fav / Marker / PC		
Channel+ VCR	Shift + CH+ /		
Channel- VCR	Shift + CH- /		
Up VCR	Shift + Up		


 
















 


 



Original	Replacement	Original	Replacement
 Power CD	 Power	 Channel- CD	 CH- / Page-
 1 CD	 1	 Up CD	 Up
 2 CD	 2	 Down CD	 Down
 3 CD	 3	 Right CD	 Right
 4 CD	 4	 Left CD	 Left
 5 CD	 5	 Enter CD	 OK
 6 CD	 6	 Pause CD	 Pause / Step / Freeze
 7 CD	 7	 Play CD	 Play / Slow
 8 CD	 8	 << CD	 << / Tune-
 9 CD	 9	 >> CD	 >> / Tune+
 0 CD	 0	 Stop CD	 Stop / Hold
 +10 CD	 Guide / EPG / -/--	 I<< CD	 I<< / Preset-
 Disc CD	 Fav / Marker / PC	 >>I CD	 >>I / Preset+
 Master	 Vol+	 Power TVC	 Shift + Power
 Master Volume-	 Vol-	 1 TVC	 Shift + 1
 Mute	 Mute / Dimmer	 2 TVC	 Shift + 2
 Channel+ CD	 CH+ / Page+	 3 TVC	 Shift + 3





 







 



 

 







 












 

 

 

 

 




Original	Replacement
 4 TVC	 +  Shift + 4
 5 TVC	 +  Shift + 5
 6 TVC	 +  Shift + 6
 7 TVC	 +  Shift + 7
 8 TVC	 +  Shift + 8
 9 TVC	 +  Shift + 9
 0 TVC	 +  Shift + 0
 +10 TVC	 +  Shift + Guide / EPG / -/-
 Disc TVC	 +  Shift + Fav / Marker / PC
 Menu TVC	 +  Shift + Menu /
 Up TVC	 +  Shift + Up
 Down TVC	 +  Shift + Down
 Right TVC	 +  Shift + Right
 Left TVC	 +  Shift + Left
 Enter TVC	 +  Shift + OK
 Pause TVC	 +  Shift + Pause / Step /
 Rec TVC	 +  Shift + Rec / Rec Mode

Original	Replacement
 Play TVC	 +  Shift + Play /
 Stop TVC	 +  Shift + Stop /
 << TVC	 +  Shift + << /
 >> TVC	 +  Shift + >> /
 >>I TVC	 +  Shift + >>I / Preset+
 I<< TVC	 +  Shift + I<< / Preset-





Original	Replacement
 Power TUN	 Power
 1 TUN	 1
 2 TUN	 2
 3 TUN	 3
 4 TUN	 4
 5 TUN	 5
 6 TUN	 6
 7 TUN	 7
 8 TUN	 8
 9 TUN	 9
 0 TUN	 0
 Master	 Vol+
 Master volume-	 Vol-
 Mute	 Mute / Dimmer
 TUNE+ TUN	 >> / Tune+
 TUNE- TUN	 << / Tune-
 ST+ TUN	 >>I / Preset+

Original	Replacement
 ST- TUN	 I<< / Preset-
 D.Access TUN	 Play / Slow
 Band TUN	 Pause / Step / Freeze
 Class TUN	 Stop / Hold
 MPX TUN	 Rec / Rec Mode
 Display TUN	 Display / Media
 RF ATT TUN	 Smart / List
 Power CDR	 Shift + Power
 1 CDR	 Shift + 1
 2 CDR	 Shift + 2
 3 CDR	 Shift + 3
 4 CDR	 Shift + 4
 5 CDR	 Shift + 5
 6 CDR	 Shift + 6
 7 CDR	 Shift + 7
 8 CDR	 Shift + 8
 9 CDR	 Shift + 9





Original	Replacement
0 CDR	+ Shift + 0
+10 CDR	+ Shift + Guide / EPG / -/--
Channel+ CDR	+ Shift + CH+ /
Channel- CDR	+ Shift + CH- /
Up CDR	+ Shift + Up
Down CDR	+ Shift + Down
Right CDR	+ Shift + Right
Left CDR	+ Shift + Left
Enter CDR	+ Shift + OK
Pause CDR	+ Shift + Pause / Step /
Play CDR	+ Shift + Play /
Stop CDR	+ Shift + Stop /
<< CDR	+ Shift + << /
Rec CDR	+ Shift + Rec / Rec Mode
>> CDR	+ Shift + >> /
I<< CDR	+ Shift + I<< / Preset-
>>I CDR	+ Shift + >>I / Preset+

Original	Replacement

