



 




| Original  | Replacement   |
|---|---|
|  Power     |  Power                   |
|  Mute      |  Mute / Dimmer           |
|  1         |  1                       |
|  2         |  2                       |
|  3         |  3                       |
|  4         |  4                       |
|  5         |  5                       |
|  6         |  6                       |
|  7         |  7                       |
|  8         |  8                       |
|  9         |  9                       |
|  Info     |  Info / Angle           |
|  0       |  0                     |
|  Recall  |  Back / Return         |
|  Menu    |  Menu / Home           |
|  Up      |  Up                    |
|  Quitter |  Exit / Cancel / Clear |

| Original  | Replacement   |
|---|---|
|  Left            |  Left                          |
|  OK              |  OK                            |
|  Right           |  Right                         |
|  Guide           |  Guide / EPG / -/-             |
|  Down            |  Down                          |
|  TV / Radio      |  TV/Radio /                    |
|  Red             |  Red / Netflix / Search        |
|  Enregistrer     |  Rec / Rec Mode                |
|  Green           |  Green / APP / Repeat          |
|  FAV             |  Fav / Marker / PC             |
|  Yellow          |  Yellow / YouTube / Repeat     |
|  Stop           |  Stop / Hold                  |
|  Blue          |  Blue / Prime Video / Random |
|  Lecteur Media |  Display / Media             |
|  I<<           |  I<< / Preset-               |
|  Play          |  Play / Slow                 |
|  <<            |  << / Tune-                  |



