



Original	Replacement	Original	Replacement
POWER	Power	MENU	Menu
UP	Up	STATUS	Eco / Aspect
LEFT	Left	MUTE	Shift + Blank / Mute
ENTER	Enter	AUTO	Auto
RIGHT	Right	BLANK	Blank / Mute
DOWN	Down	SOURCE	Source
PAGE UP	Shift + Vol + / Page +	FREEZE	Freeze / Timer
PAGE DOWN	Shift + Vol - / Page -	ZOOM+	+ / Play
▲	Shift + Up	ZOOM-	- / Stop
KEYSTONE UP	Mode		
KEYSTONE	Comp / Video		
◀	Shift + Left		
◀	Shift + Enter		
▶	Shift + Right		
▼	Shift + Down		
VOLUME-	Vol - / Page -		
VOLUME+	Vol + / Page +		

Original	Replacement	Original	Replacement
MENU	Menu	MENU	Menu
STATUS	Eco / Aspect	STATUS	Eco / Aspect
MUTE	Shift + Blank / Mute	MUTE	Shift + Blank / Mute
AUTO	Auto	AUTO	Auto
BLANK	Blank / Mute	BLANK	Blank / Mute
SOURCE	Source	SOURCE	Source
FREEZE	Freeze / Timer	FREEZE	Freeze / Timer
ZOOM+	+ / Play	ZOOM+	+ / Play
ZOOM-	- / Stop	ZOOM-	- / Stop

