
 




 

 


Original	Replacement	Original	Replacement
 Power	 Power	 Yellow/Repeat	 Yellow
 I<<	 I<<	 Blue/A-B	 Blue
 Open/Close	 Eject	 CH+	 Ch +
 <<	 <<	 CH-	 Ch -
 >>	 >>	 Tv-Menu	 Menu
 >>	 >>	 TV/AV	 AV
 Play/Pause	 Play	 Vol+	 Vol +
 TV/TXT/Language	 Text	 Vol-	 Vol -
 Cancel/Zoom	 Shift + Eject	 DTV	 Smart
 Reveal/Subtitle	 Subt	 DVD Setup	 Shift + Menu
 Stop	 Stop	 Exit	 Exit
 Hold/Menu	 D. Menu	 Display	 Shift + Info
 Size/Angle	 Format	 Up	 Up
 Subpage/Title	 Options	 Down	 Down
 Index/Goto	 Media	 Right	 Right
 Red/Program	 Red	 Left	 Left
 Green/Slow	 Green	 OK	 Ok





Original	Replacement	Original	Replacement
 1	 1	 Info	 Info
 2	 2	 Subtitle	 Shift + Subt
 3	 3	 Channel List	 List
 4	 4	 EPG	 Guide
 5	 5	 Tv/Radio	 TV/R
 6	 6	 FAV	 Shift + Pre Ch
 7	 7	 Aspect	 3D
 8	 8		
 9	 9		
 0	 0		
 -/--	 Shift + Guide		
 Recall	 Pre Ch		
 Picture	 Shift + Format		
 Sound	 Shift + Dual		
 Nicam/A2	 Dual		
 Mute	 Mute		
 Sleep	 Sleep		

Original	Replacement	Original	Replacement
 Info	 Info		
 Subtitle	 Shift + Subt		
 Channel List	 List		
 EPG	 Guide		
 Tv/Radio	 TV/R		
 FAV	 Shift + Pre Ch		
 Aspect	 3D		

