



Original	Replacement	Original	Replacement
	Standby		Power
	Auto		Smart / List
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	Vol+		Vol+
	Vol-		Vol-
	Aspect		Shift + Picture / Format
	Nicam		Audio / Lang I/II
	Display		Display / Media
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	LCD Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Input		AV / Input / RDS
	PMode		Picture / Format
	SMode		Sound / Title
	Sleep		Sleep / Timer
	Fav		Fav / Marker / PC





	Original	Replacement		Original	Replacement
		Fav-			I<< / Preset-
		EPG			Guide / EPG / -/--
		Text			Text / Goto
		Fav+			>>I / Preset+
		Hold			Stop / Hold
		Lang			Shift + Audio / Lang I/II
		Subtitle			Subtitle / EQ
		Index			Info / Angle
		Size			Zoom / Size
		Reveal			TV/Radio /
		Subpage			Eject / Surround
		Red			Red / Netflix / Search
		Green			Green / APP / Repeat
		Yellow			Yellow / YouTube / Repeat
		Blue			Blue / Prime Video / Random

