 







 





















 














Original	Replacement
 Open / Close	 Eject / Surround
 Mute	 Mute / Dimmer
 NP	 D.Menu / Top
 Recall	 Back / Return
 PS	 Text / Goto
 Spectrum	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/--

Original	Replacement
 Clear	 Exit / Cancel / Clear
 Stop	 Stop / Hold
 Zoom	 Zoom / Size
 3D	 Picture / Format
 Search	 Red / Netflix / Search
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Setup	 Setup / OPT /
 L/R Audio	 Audio / Lang I/II
 Left	 Left
 Up	 Up
 Right	 Right
 Enter	 OK
 Down	 Down
 PBC Menu	 Menu / Home
 Vol-	 Vol-
 Vol+	 Vol+





Original	Replacement	Original	Replacement
 OSD	 Display / Media		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Title	 Sound / Title		
 Slow	 Shift + Play /		
 Repeat	 Green / APP / Repeat		
 A-B	 Yellow / YouTube / Repeat		
 Return	 Shift + Back / Return		
 Subtitle	 Subtitle / EQ		
 Angle	 Info / Angle		
 Prog	 TV/Radio /		

Original	Replacement	Original	Replacement

