



Original	Replacement
 Power Blue	 Shift + Power
 POWER Red	 Power
 RED / F1	 Red
 GREEN / F2	 Green
 YELLOW / F3	 Yellow
 BLUE / F4	 Blue
 MUTE	 Mute
 AV	 AV
 Sound Mode	 Dual
 SETUP	 Options
 APP	 Media
 TV	 TV/R
 ≡	 Text
 KB	 Guide
 I<<<	 I<<<
 >>>I	 >>>I
 <<<	 <<<

Original	Replacement
 >>	 >>
 Home	 Smart
 BACK	 Back
 UP	 Up
 LEFT	 Left
 OK	 Ok
 RIGHT	 Right
 DOWN	 Down
 ≡	 Menu
 i	 Info
 VOL+	 Vol +
 PLAY/PAUSE	 Pause
 PLAY/PAUSE	 Play
 CHAN.+	 Ch +
 VOL-	 Vol -
 STOP	 Stop
 CHAN.-	 Ch -





Original		Replacement		Original		Replacement	
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Format		Format				
	0		0				
	Recall		Pre Ch				

