



 
















 




 



 















 

 



 
 
 


 


 










	Original	Replacement		Original	Replacement
	 Power On	 Power		 Vol-	 Vol -
	 Power Off	 Shift + Power		 Mute	 Mute
	 1	 1		 FRQ Direct	 Play
	 2	 2		 Tune	 I<<
	 3	 3		 Preset	 >>I
	 4	 4		 FM Mono	 Pause
	 5	 5		 Band	 Stop
	 6	 6		 Center	 Yellow
	 7	 7		 Swoofers	 Red
	 8	 8		 Surround	 Green
	 9	 9		 Menu	 Menu
	 0	 0		 Up	 Up
	 Ten/+10	 GUIDE		 Down	 Down
	 Memory	 PRE-CH		 +/Forward	 Right
	 CH+	 Ch +		 -/Back	 Left
	 CH-	 Ch -		 Enter	 Ok
	 Vol+	 Vol +		 CD	 Shift + 1






 

 
 
 



 

 









 


 
 


























Original	Replacement	Original	Replacement
Tun	Shift + 2	7 CH	Subt
Tape	Shift + 3	Display	Info
EXT	Shift + 4	Tape 2	Exit
V1/DVD	Shift + 5	Phono	Back
V2	Shift + 6	Tone	Text
V3	Shift + 7	D-SLT	D. Menu
V4	Shift + 8	Scan	Shift + Play
V5	Shift + 9	PTY	<<
EQ	Smart	P-Tun	>>
DYN	Media	TP	Shift + Pause
Rec	Rec	TA	Shift + Stop
Zone	Shift + Smart	Aspect	Format
Sur+	Shift + Media	Disp	Shift + Info
2 CH	List	PIP	Sleep
PL C	Options	POP	TV/R
PL M	3D	Output	AV
5 CH	Dual	Power	Blue





 














 

 





 









 


 



 


 



 
 


 
 

 

 
 
 

 




	Original	Replacement		Original	Replacement
	Power On				Play
	Power Off				I<<
	1				>>I
	2				Pause
	3				Stop
	4				Menu
	5				Up
	6				OSD
	7				Down
	8				-/Back
	9				-/Back
	0				+ /Forward
	Ten (+10)				>>
	Clear (X)				Enter
	Vol+				Search-
	Vol-				Search+
	Mute				Random (DYN)
					TV/R





Original		Replacement		Original		Replacement	
	Power On		Power		I<<		I<<
	Power Off		Shift + Power		>>I		>>I
	1		1		Pause		Pause
	2		2		Stop		Stop
	3		3		Open (ENT)		Ok
	4		4		Open (ENT)		Eject
	5		5		Search-		Ch -
	6		6		Search+		Ch +
	7		7		Disc 1		Shift + 1
	8		8		Disc 2		Shift + 2
	9		9		Disc 3		Shift + 3
	0		0		Disc 4		Shift + 4
	TEN (+10)		Guide		Disc 5		Shift + 5
	Vol+		Vol +		Program (2CH)		Sleep
	Vol-		Vol -		Random (PL C)		TV/R
	Mute		Mute		Repeat (PL M)		Text
	Play		Play		Disc+ (7CH)		>>



