











































 




 



























 





Original		Replacement		Original		Replacement	
	Power		Power		Recall		Back / Return
	Mute		Mute / Dimmer		Display		Display / Media
	Picture		Picture / Format		Up		Up
	Aspect		Shift + Picture / Format		Input		AV / Input / RDS
	Sleep		Sleep / Timer		Left		Left
	Sound		Sound / Title		OK		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		EPG		Guide / EPG / -/-
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		Tv/Radio		TV/Radio /
	FAV		Fav / Marker / PC		CH-		CH- / Page-
	0		0		Open/Close		Eject / Surround





Original	Replacement
 Subtitle	 Subtitle / EQ
 CH List	 Smart / List
 Rec	 Rec / Rec Mode
 Rec List	 D.Menu / Top
 Tv/TXT/D.Pro	 Text / Goto
 Cancel/D.Rep	 Shift + Exit / Cancel / Clear
 Reveal/D.Goto	 Setup / OPT /
 Nicam/D.Slow	 Audio / Lang I/II
 I<</Index	 I<< / Preset-
 >>I/Hold	 >>I / Preset+
 Size/D.Zoom	 Zoom / Size
 Subpage/D.Title	 Info / Angle
 <<	 << / Tune-
 >>	 >> / Tune+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 Red/D.Set	 Red / Netflix / Search
 Green/D.Menu	 Green / APP / Repeat
 Yellow/D.Sub	 Yellow / YouTube / Repeat
 Blue/D.Lan	 Blue / Prime Video / Random

