


 
 
 
 
 
 

 
 
 






 






 
 

 
 

 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute
 1	 1	 Back	 Back
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 EPG	 Guide
 5	 5	 Menu	 Menu
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 TV/RAD / AV	 TV/R	 i	 Info
 TV/RAD / AV	 AV	 Exit	 Exit
 FAV / -/--	 Pre Ch	 Red	 Red
 FAV / -/--	 Shift + Guide	 Red / <<	 <<
 Vol+	 Vol +	 Green / Play	 Green
 Vol-	 Vol -	 Green / Play	 Play





Original	Replacement	Original	Replacement
 Yellow / Stop	 Yellow		
 Yellow / Stop	 Stop		
 Blue / >>	 Blue		
 Blue / >>	 >>		
 Pause / [...]	 Subt		
 Pause / [...]	 Pause		
 ✓ / View	 Smart		
 Rec / SAT	 Rec		
 Rec / SAT	 Media		

