








































 








































Original	Replacement	Original	Replacement
Off	 Power	Up / P+	 Up
Mute	 Mute / Dimmer	Left / Vol-	 Left
Hold	 Stop / Hold	OK	 OK
Reveal	 << / Tune-	Right / Vol+	 Right
Sound	 Sound / Title	PS	 Exit / Cancel / Clear
A/B	 Audio / Lang I/II	Down / P-	 Down
Subcode	 Subtitle / EQ	P/C	 Back / Return
<!>	 Eject / Surround	Right / Vol+	 Vol+
earphones	 Picture / Format	VT/TV	 Smart / List
Size	 Zoom / Size	Up / P+	 CH+ / Page+
[.]	 Sleep / Timer	Left / Vol-	 Vol-
Norm	 TV/Radio /	Display	 Display / Media
Contrast	 D.Menu / Top	Down / P-	 CH- / Page-
Color	 Setup / OPT /	1	 1
Text	 Text / Goto	2	 2
AV	 AV / Input / RDS	3	 3
Brightness	 Menu / Home	4	 4




Original	Replacement	Original	Replacement
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
--	 Guide / EPG / -/--		
0	 0		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Mix	 Shift + Text /		



Original	Replacement	Original	Replacement
On/Off	 Power	Info	 Info / Angle
Mute	 Mute / Dimmer	Menu Left	 Left
Update	 Play / Slow	OK Enter	 OK
Reveal	 Pause / Step / Freeze	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Off	 Exit / Cancel / Clear
Color- S.Std	 Sound / Title	Menu Down	 Down
Menu audio	 Audio / Lang I/II	Back	 Back / Return
Subt.List	 Subtitle / EQ	Volume+	 Vol+
Surround	 Eject / Surround	Display	 Smart / List
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Disp	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
On/Tim	 Setup / OPT /	1	 1
Text	 Text / Goto	2	 2
Menu	 Menu / Home	3	 3
Menu Up	 Up	4	 4



Original	Replacement	Original	Replacement
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Nicam/Mono	 +  Shift + Audio / Lang I/II		
Level L	 +  Shift + Left		
Level R/Woofers	 +  Shift + Right		
Audio+	 +  Shift + Vol+		

