


 
 


 
 
 

 

 

 

 
 
 
 
 
 




 
 


 
 

 
 

 



 



 
 
 

 
 


 


 
 


 







 




Original	Replacement	Original	Replacement
 Standby	 Power	 Left	 Left
 Mute	 Mute	 Enter	 Ok
 Setup	 Menu	 << Skip	 <<
 DIR	 Media	 Skip >>	 >>
 Edit	 Exit	 I<</Prev	 I<<
 Repeat	 Text	 >>I/Next	 >>I
 Subtitle	 Subt	 Play/Pause	 Play
 Display	 Info	 Stop	 Stop
 Video Out	 AV	 DVD/Play	 +  Shift + Play
 Zoom	 Eject	 I>/Slow	 Pause
 Audio/Stream	 Dual	 1	 1
 Digest/Photo	 Format	 2	 2
 Mode/Photo	 3D	 3	 3
 Home	 Smart	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7





Original		Replacement		Original		Replacement	
	8		8				
	9		9				
	0		0				
	+10		Guide				
	Time Search		Pre Ch				
	Vol+		Vol +				
	Vol-		Vol -				
	Type/EQ		Ch +				
	On/Off/EQ		Ch -				
	Movie		Red				
	Music		Green				
	Photo		Yellow				
	File		Blue				

