



Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Mute	 Mute	 Menu	 Menu
 FAV	 Pre Ch	 Exit	 Exit
 Subtitle	 Subt	 EPG	 Guide
 Info	 Info	 Goto	 Shift + Guide
 TTX	 Text	 Up	 Up
 Recall	 Back	 Down	 Down
 List	 List	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Vol +	 Vol +
 4	 4	 Vol -	 Vol -
 5	 5	 Pg Up	 Shift + Up
 6	 6	 PG Dn	 Shift + Down
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 >>	 >>





	Original	Replacement	Original	Replacement
	<<		<<	
	>>		>>	
	I<<		I<<	
	Play		Play	
	Pause		Pause	
	Stop		Stop	
	Rec		Rec	
	Lang		Dual	
	Timeshift		Smart	
	Tv/Radio		TV/R	
	Repeat	 + 	Shift + Text	
	Red / Zoom		Red	
	Green / Aspect		Green	
	Yellow / V-Format		Yellow	
	Blue / Timer		Blue	

