

 

 
 
 

 
 
 


 





 

 






 








Original	Replacement
	POWER
	INFO
	MUTE
	1
	2
	3
	4
	5
	6
	7
	8
	9
	SOURCE
	0
	AUDIO
	FORMAT
	BACK

Original	Replacement
	MENU
	EXIT
	UP
	LEFT
	ENTER
	RIGHT
	VOL+
	DOWN
	CH+
	VOL-
	CH-
	LIST
	SLEEP
	EPG
	FAV
	RED



