


 





 
 


 
 

 
 
 

 


 
 
 
 

 
 
 
 
 


 
 
 
 
 

 
 

 
 






 

 
 



 



 

 











 
 

 




 
 
 







	Original	Replacement		Original	Replacement
	1		1		Up
	2		2		Down
	3		3		Right
	4		4		Left
	5		5		Open/Close
	6		6		Menu
	7		7		Return
	8		8		Title List/Disc Menu
	9		9		Exit
	0		0		Play List/Title Menu
	Tv/DVD		TV/R		Timer/Repeat
	Input Sel		AV		Marker
	Subtitle		Subt		Copy
	Tv Vol+		Vol +		Rec Mode
	Tv Vol-		Vol -		Pause/Rec Pause/Timeshift
	Tv Mute/Audio		Mute		Standby/on
	OK		Ok		Tv Standby/on
					Shift + Options
					Shift + Rec
					Format
					Shift + Power





Original	Replacement
 Standby/on	 Power
 Tv Standby/on	 Shift + Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input Sel	 AV
 Tv/DVD	 TV/R
 Subtitle	 Subt
 Pause	 Pause

Original	Replacement
 Play	 Play
 Stop	 Stop
 >>	 >>
 <<	 <<
 >>	 >>
 <<	 <<
 Tv Mute/Audio	 Mute
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -
 Prog Up	 Shift + Up
 Prog Down	 Ch +
 Red/A	 Red
 Green/B	 Green
 Yellow/C	 Yellow
 Blue/D	 Blue
 Rec	 Rec
 Menu	 Menu



