










 

 



 









 









 



 












 




 







 








 

 
 

 
 
 

 

 

 
 
 
 
 

 








 

 


Original		Replacement		Original		Replacement	
	Standby/On		Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Play		Play
	3		3		Stop		Stop
	4		4		<<		<<
	5		5		>>		>>
	6		6		Mute		Mute
	7		7		Prog+		Ch +
	8		8		Prog-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Tv/DVD		TV/R		Menu		Menu
	Open/Close		Eject		Return		Back
	DTV/Analog		Smart		Exit		Exit
	Input Sel		AV		Title List/Disc Menu		Media
	Copy		Options		Play List/Title Menu		Shift + Menu
	Pause		Pause		Red		Red



 





 
 
 


 





 











 






Original	Replacement
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Guide	 Guide
 Info	 Info
 Subtitle	 Subt
 Text	 Text
 Tv/Radio	 Sleep
 FAV List	 Pre Ch
 Marker	 Shift + Options
 Rec	 Rec
 Audio	 Dual
 Rec Mode	 Shift + Rec
 Rec	 Format
 Repeat	 Shift + Text
 OK	 Ok
 Up	 Up

Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 USB	 Shift + Media
 Timer	 Shift + AV
 HDD	 Shift + Smart






 



 

 





 



 

 

 



 



 



 



 
 
 

 





 









 
 



 





	Original	Replacement	Original	Replacement
	Input Sel	 AV		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Prog+	 Ch +		
	Prog-	 Ch -		
	Standby/On TV	 Power		
	Mute Tv	 Mute		
	Tv Vol+	 Vol +		
	Tv Vol-	 Vol -		

 





 
 
 
 

 
 
 

















 


 



Original	Replacement	Original	Replacement
 Standby/On	 Power	 I<<	 I<<
 1	 1	 >>I	 >>I
 2	 2	 Play	 Play
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 Prog+	 Ch +
 7	 7	 Prog-	 Ch -
 8	 8	 Menu	 Menu
 9	 9	 Return	 Back
 0	 0	 Exit	 Exit
 Tv/DVD	 TV/R	 Title List/Disc Menu	 Media
 Open/Close	 Eject	 Play List/Title Menu	 Shift + Menu
 DTV/Analog	 Smart	 Red	 Red
 Input Sel	 AV	 Green	 Green
 Copy	 Options	 Yellow	 Yellow
 Pause	 Pause	 Blue	 Blue





Original	Replacement
 Guide	 Guide
 Info	 Info
 Subtitle	 Subt
 Text	 Text
 Tv/Radio	 D. Menu
 FAV List	 Pre Ch
 Marker	 Shift + Options
 Rec	 Rec
 Audio	 Dual
 Rec Mode	 Shift + Rec
 Rec	 Format
 Repeat	 Shift + Text
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Original	Replacement
 USB	 Shift + Media
 Timer	 Shift + AV
 HDD	 Shift + Smart

