


 

 












Original	Replacement
	
Power	Power
	
Source	AV / Input / RDS
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
TTX/MIX	Text / Goto
	
0	0
	
Pre-CH	Back / Return
	
Vol+	Vol+
	
Mute	Mute / Dimmer
	
P+	CH+ / Page+

Original	Replacement
	
Vol-	Vol-
	
CH List	Smart / List
	
P-	CH- / Page-
	
Media.P	Display / Media
	
Menu	Menu / Home
	
Guide	Guide / EPG / -/-
	
Tools	Setup / OPT /
	
Up	Up
	
Info	Info / Angle
	
Left	Left
	
Enter	OK
	
Right	Right
	
Return	Shift + Back / Return
	
Down	Down
	
Exit	Exit / Cancel / Clear
	
Red	Red / Netflix / Search
	
Green	Green / APP / Repeat





Original	Replacement
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	D.Menu / Top
	Shift + 3
	Subtitle / EQ
	Audio / Lang I/II
	Stop / Hold
	<< / Tune-
	Play / Slow
	Pause / Step / Freeze
	>> / Tune+

Original	Replacement

