 







 




 

 


 

 


 

 

 

 



 










 










	Original	Replacement		Original	Replacement
	Power		Power		P+
	Source		AV		P-
	1		1		CH List
	2		2		Smart Hub
	3		3		Menu
	4		4		Search
	5		5		Tools
	6		6		Info
	7		7		Return
	8		8		Exit
	9		9		Up
	0		0		Down
	TTX/MIX		Text		Right
	PRE-CH		Pre Ch		Left
	Vol+		Vol +		Enter
	Vol-		Vol -		Red
	Mute		Mute		Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 Social TV	 Media		
 HDMI	 Subt		
 3D	 3D		
 E-Manual	 D. Menu		
 P.Size	 Format		
 SRS	 Dual		
 <<<	 <<<		
 I<<<	 I<<<		
			
 >>>	 >>>		
 >>I	 >>I		
 Rec	 Rec		
 ▶	 ▶		
 ■	 ■		

