 

 

 
 
 


 
 

 

 

 
 
 
 
 

 
 
 
 
 

 





 

 
 
 

 

 

 

 









 
 




 

 







Original	Replacement
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 S	 FAV PRE-CH
 <<	 <<
 Stop	 Stop
 Play	 PLAY MODE

Original	Replacement
 >>	 >>
 V.Menu	 E-MANUAL D.MENU
 Mute	 MUTE
 P+	 + CH
 P-	 CH -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 + VOL
 Vol-	 VOL -
 Menu	 TOP MENU MENU
 Display	 DISPLAY INFO
 P.STD	 ECO 3D
 Rec	 REC MODE
 Eject	 ZOOM
 Pause/P/S&LNA	 Pause





Original	Replacement	Original	Replacement
Crystal PB	TV/R		
TRK up	>>I		
TRK Down	I<<<		
Index	List		
Memory	Ok		
Sleep	Sleep		
Lang.Sel	Dual		
Clear	Exit		

