




 
 




 



 

 


 


 














Original	Replacement
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 Guide	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 CH List	 List
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Home	 Smart
 Content	 TV/R
 Tools	 Options
 Info/Clock	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green





Original		Replacement		Original	Replacement
	Yellow		Yellow		
	Blue		Blue		
	Alarm		Pre Ch		
	3D		3D		
	Subt.		Subt		
	Stop		Stop		
	<<		<<		
	1<<		1<<		
	Play		Play		
	Pause		Pause		
	>>		>>		
	>>1		>>1		

