





 



 















 



 

 

 











 





 
 
 
 


 
 



 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 TV	 TV/Radio /	 Source	 AV / Input / RDS
 1	 1	 P -	 CH- / Page-
 2	 2	 Info	 Info / Angle
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Up	 Up
 7	 7	 Return	 Shift + Back / Return
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 FAV CH	 Fav / Marker / PC	 Right	 Right
 0	 0	 Internet	 Smart / List
 PRE CH	 Back / Return	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 P +	 CH+ / Page+	 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	TTX/MIX  Text / Goto		
	Media P  Display / Media		
	Content  D.Menu / Top		
	CH LIST  Shift + Smart / List		
	AD  Audio / Lang I/II		
	SUBT  Subtitle / EQ		
	<<  << / Tune-		
	Pause  Pause / Step / Freeze		
	>>  >> / Tune+		
	Rec  Rec / Rec Mode		
	Play  Play / Slow		
	Stop  Stop / Hold		

