

 





 

















 







 



 
 






 











 



 









| Original | Replacement | Original | Replacement |
|--|--|---|---|
|  Power |  Power |  V.Menu |  D.Menu / Top |
|  Input |  AV / Input / RDS |  Menu |  Menu / Home |
|  Display |  Display / Media |  Vol - |  Vol- |
|  P.STD |  Picture / Format |  P + |  CH+ / Page+ |
|  Mute |  Mute / Dimmer |  Vol + |  Vol+ |
|  1 |  1 |  P - |  CH- / Page- |
|  2 |  2 |  << REW |  << / Tune- |
|  3 |  3 |  Stop |  Stop / Hold |
|  4 |  4 |  Play |  Play / Slow |
|  5 |  5 |  >> FF |  >> / Tune+ |
|  6 |  6 |  Rec |  Rec / Rec Mode |
|  7 |  7 |  Eject |  Eject / Surround |
|  8 |  8 |  Pause / P/S |  Pause / Step / Freeze |
|  9 |  9 |  Crystal PB |  Smart / List |
|  -/-- |  Guide / EPG / -/-- |  TRK Up |  >> / Preset+ |
|  0 |  0 |  TRK Up |  Up |
|  Pre-CH |  Back / Return |  Index |  Info / Angle |



