
 
 



 



















































 









 



 



 







Original		Replacement		Original		Replacement	
	Power		Power		V.Menu		D.Menu / Top
	Input		AV / Input / RDS		Menu		Menu / Home
	Display		Display / Media		Vol -		Vol-
	P.STD		Picture / Format		P +		CH+ / Page+
	Mute		Mute / Dimmer		Vol +		Vol+
	1		1		P -		CH- / Page-
	2		2		<< REW		<< / Tune-
	3		3		Stop		Stop / Hold
	4		4		Play		Play / Slow
	5		5		>> FF		>> / Tune+
	6		6		Rec		Rec / Rec Mode
	7		7		Eject		Eject / Surround
	8		8		Pause / P/S		Pause / Step / Freeze
	9		9		Crystal PB		Smart / List
	-/--		Guide / EPG / -/--		TRK Up		>> / Preset+
	0		0		TRK Up		Up
	Pre-CH		Back / Return		Index		Info / Angle





Original	Replacement	Original	Replacement
 Memory	 OK		
 Sleep	 Sleep / Timer		
 TRK Down	 Down		
 TRK Down	 I<< / Preset-		
 Lang Sel	 Audio / Lang I/II		
 Clear	 Exit / Cancel / Clear		

Original	Replacement

