

 

 

 
 
 
 



 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 TV/VCR - DVD	 Smart	 Vol-	 Vol -
 1	 1	 P/TRK+	 Ch +
 2	 2	 P/TRK-	 Ch -
 3	 3	 Slow+	 Shift + Ch +
 4	 4	 Slow-	 Shift + Ch -
 5	 5	 << / Index	 <<
 6	 6	 S.Mode	 Shift + Dual
 7	 7	 P.Mode	 Format
 8	 8	 >> / Mix	 >>
 9	 9	 I<<	 I<<
 0	 0	 >>I	 >>I
 -/--	 Guide	 Stop	 Stop
 Mute	 Mute	 Play / Pause	 Play
 I-II Audio	 Dual	 Play / Pause	 Pause
 TV/Text	 Text	 Red / Menu	 Red
 Input	 AV	 Red / Menu	 Menu

Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 TV/VCR - DVD	 Smart	 Vol-	 Vol -
 1	 1	 P/TRK+	 Ch +
 2	 2	 P/TRK-	 Ch -
 3	 3	 Slow+	 Shift + Ch +
 4	 4	 Slow-	 Shift + Ch -
 5	 5	 << / Index	 <<
 6	 6	 S.Mode	 Shift + Dual
 7	 7	 P.Mode	 Format
 8	 8	 >> / Mix	 >>
 9	 9	 I<<	 I<<
 0	 0	 >>I	 >>I
 -/--	 Guide	 Stop	 Stop
 Mute	 Mute	 Play / Pause	 Play
 I-II Audio	 Dual	 Play / Pause	 Pause
 TV/Text	 Text	 Red / Menu	 Red
 Input	 AV	 Red / Menu	 Menu





Original	Replacement
 Green / DVD	 Green
 Green / DVD	 D. Menu
 Yellow / P.Size	 Yellow
 Blue / Info	 Blue
 Blue / Info	 Info
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Open / Close	 Eject
 Rec / Return	 Rec
 Rec / Return	 Back
 Pre-CH	 Pre Ch
 Step	 Shift + Pause
 Sleep	 Sleep
 Show View	 Media

Original	Replacement
 Clear	 Exit
 Angle	 3D
 Repeat	 Shift + Text
 SP/LP	 TV/R
 Crystal PB	 Options
 Zoom	 Shift + Eject
 Subtitle	 Subt

