 



















 

















Original	Replacement
 Power	 Power
 Tv	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 OK
 PRE-CH	 Back / Return
 CH LIST	 Shift + Smart / List
 FAV CH	 Fav / Marker / PC
 Tools	 Setup / OPT /

Original	Replacement
 Menu	 Menu / Home
 Return	 Shift + Back / Return
 Info	 Info / Angle
 Internet	 Smart / List
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Red	 Red / Netflix / Search
 Enter	 Shift + OK
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer



Tools



	Original	Replacement		Original	Replacement
	Source	 AV / Input / RDS			
	PR+	 CH+ / Page+			
	PR-	 CH- / Page-			
	TTX/MIX	 Text / Goto			
	Media.P	 Display / Media			
	Content	 Picture / Format			
	Guide	 Guide / EPG / -/--			
	Subt	 Subtitle / EQ			
	<<	 << / Tune-			
	Pause	 Pause / Step / Freeze			
	>>	 >> / Tune+			
	Rec	 Rec / Rec Mode			
	Play	 Play / Slow			
	Stop	 Stop / Hold			

