



Original	Replacement	Original	Replacement
Power	Power	CH/P-	CH- / Page-
1	1	[= _]/Source	AV / Input / RDS
2	2	[= i]/Menu	Menu / Home
3	3	[= ]/TTX/MIX	Text / Goto
4	4	[= ?]/Info	Info / Angle
5	5	Exit	Exit / Cancel / Clear
6	6	Up	Up
7	7	Down	Down
8	8	Right	Right
9	9	Left	Left
0	0	Enter	OK
-/--/+100	Guide / EPG / -/--	Red/Auto	Red / Netflix / Search
[= o]	Sleep / Timer	Green/M/B/P.Mod	Green / APP / Repeat
Mute	Mute / Dimmer	Yellow/P.Size	Yellow / YouTube / Repeat
Vol+	Vol+	Blue/Still	Blue / Prime Video / Random
Vol-	Vol-	[= +]/PIP	Picture / Format
CH/P+	CH+ / Page+	- I /S.Mode	Setup / OPT /



