


 





 


 

 

 


 






Original	Replacement
 Power	 Power
 Function	 Smart / List
 1 / CD	 1
 1 / CD	 Shift + 3
 2 / VCR	 2
 2 / VCR	 Shift + 4
 3 / DVD	 3
 3 / DVD	 Shift + 2
 4 / 5.1 CH	 4
 5 / SAT	 5
 5 / SAT	 Shift + 0
 6 / AUX	 6
 6 / AUX	 Shift + 7
 7	 7
 8	 8
 9	 9
 Sleep	 Sleep / Timer

Original	Replacement
 0	 0
 Input Mode	 AV / Input / RDS
 EX/ES	 Zoom / Size
 Sub Woofer	 Eject / Surround
 TUNER	 TV/Radio /
 TUNER	 Shift + 6
 Mo. / St.	 Sound / Title
 Volume+	 Vol+
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Setup / Menu	 Menu / Home
 Setup / Menu	 Setup / OPT /
 Tuning Mode	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right





Original	Replacement
 Down	 Down
 Info	 Info / Angle
 DRC	 Picture / Format
 Tuner Memory	 Fav / Marker / PC
 NEO:6 Mode	 Red / Netflix / Search
 SFE.Mode	 Green / APP / Repeat
 PL II Mode	 Yellow / YouTube / Repeat
 PL II Effect	 Blue / Prime Video / Random
 Stereo	 Audio / Lang I/II
 SPK. Level	 Subtitle / EQ
 Test Tone	 Text / Goto
 RDS Display	 Shift + Display / Media
 PTY+	 Shift + Up
 PTY Search	 Shift + OK
 PTY-	 Shift + Down
 TA	 Shift + Right
 Display	 Display / Media

Original	Replacement

